



SW-H411A

**HDMI 2.0 4x1 Presentation Switcher with
Audio Extraction**

Upgrade Instruction

Firmware Upgrade

MCU Upgrade

Please follow the steps as below to upgrade firmware by the **FW** port on the front panel:


- 1) Prepare the latest MCU upgrade file (.bin) and **rename** it as "USERAPP.bin" on PC.
- 2) Power off the switcher and connect the **FW** port of switcher to the PC with USB cable.
- 3) Power on the switcher, and then the PC will automatically detect a U-disk named of "BOOTDISK".
- 4) Double-click the U-disk, a file named of "READY.TXT" would be showed.
- 5) Directly copy the latest upgrade file (.bin) to the "BOOTDISK" U-disk.
- 6) Reopen the U-disk to check the filename "READY.TXT" whether automatically has changed to "SUCCESS.TXT", if yes, the firmware was updated successfully, otherwise, the firmware updating has failed, the name of upgrade file (.bin) should be confirmed again, and then follow the above steps to update again.
- 7) Remove the USB cable after firmware upgrade.
- 8) After firmware upgrade, the switcher should be restored to factory default by sending command.

GUI Upgrade

Please visit <http://192.168.0.178:100> for GUI online upgrade.

Type the username and password (the same as the GUI log-in setting, modified password will be available only after rebooting of the unit) to login the configuration interface. After that, click

Administration in the source menu to get to **Upload Program** as shown below:

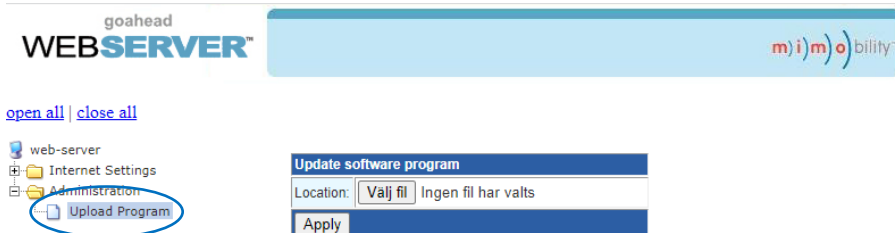

Select the update file and click **Apply** button, and then it will start upgrade process.